



Tel: +44 (0) 1706 869777  
 E-mail: [sales@desal.co.uk](mailto:sales@desal.co.uk)  
 Web: [www.desal.co.uk](http://www.desal.co.uk)

## DOW FILMTEC™ Membranes

### DOW FILMTEC 4.6" Tapwater RO Elements

#### Features


DOW FILMTEC™ 4.6-inch diameter RO elements offer high quality water for sanitary applications, using the high performance TW30HP membrane, which offers excellent permeate flow and salt rejection. These elements are made with the same high quality materials of construction as our larger DOW FILMTEC elements used in municipal and industrial systems. For added convenience during shipping, storage and loading, these elements are available as either wet or dry products.

#### Product Specifications

Product	Product Water Flow Rate			Applied Pressure psig (bar)	Stabilized Salt Rejection Cl <sup>-</sup> (%)
	(gpd)	(m <sup>3</sup> /d)	(l/h)		
TW30HP-4611	1,200	4.54	189	225 (15.5)	99.0
TW30HP-4619	1,450	5.49	229	225 (15.5)	99.0
TW30HP-4641	5,200	19.68	820	225 (15.5)	99.0

1. Permeate flow and salt rejection based on the following test conditions: 2,000 ppm NaCl, pressure specified above, 77°F (25°C), pH 8 and the following recovery rates: TW30HP-4611 - 5%, TW30HP-4619 - 8%, TW30HP-4641 - 15%.
2. Minimum salt rejection for individual element is 98.0%.
3. Flow rates for individual elements may vary +/-20%.
4. For the purpose of improvement, specifications may be updated periodically.

Figure 1

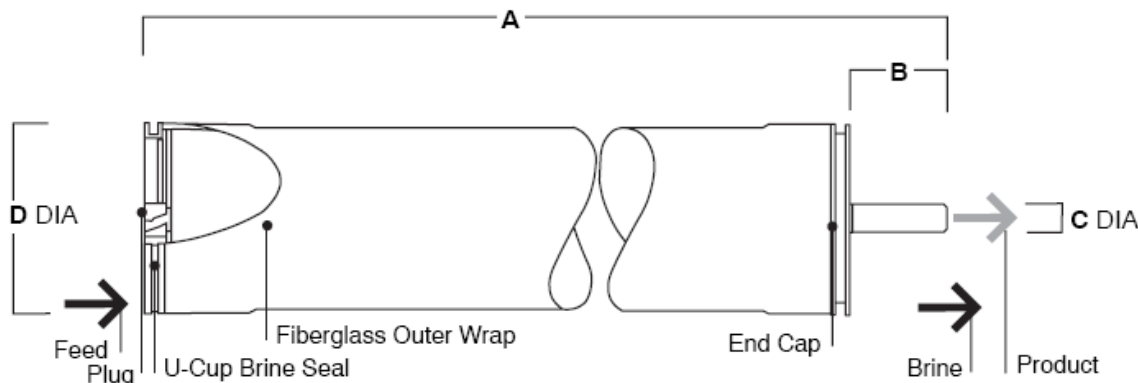

Product	Maximum Feed Flow Rate, gpm (m <sup>3</sup> /h)	Dimensions – Inches (mm)			
		A	B	C	D
TW30HP-4611	18 (4.1)	11.32 (287.53)	--	0.75 (19)	4.61 (117)
TW30HP-4619	18 (4.1)	19.20 (487.68)	--	0.75 (19)	4.61 (117)
TW30HP-4641	18 (4.1)	41.31 (1,049)	2.19 (56)	0.75 (19)	4.61 (117)

1. Refer to ROSA for multiple-element systems using the TW30HP-4641.
  2. Elements fit nominal 4.6-inch I.D. pressure vessels.
- 1 inch = 25.4 mm

## Operating Limits

• Membrane Type	Polyamide Thin-Film Composite
• Maximum Operating Temperature	113°F (45°C)
• Maximum Operating Pressure	600 psi (4.1 MPa)
• Maximum Pressure Drop	15 psi (1.0 bar)
• pH Range, Continuous Operation <sup>a</sup>	2 - 11
• pH Range, Short-Term Cleaning <sup>b</sup>	1 - 13
• Maximum Feed Silt Density Index	5
• Free Chlorine Tolerance <sup>c</sup>	< 0.1 ppm

<sup>a</sup> Maximum temperature for continuous operation above pH 10 is 95°F (35°C)

<sup>b</sup> Refer to cleaning guidelines in specification sheet 609-23010.

<sup>c</sup> Under certain conditions, the presence of free chlorine and other oxidizing agents will cause premature membrane failure. Since oxidation damage is not covered under warranty, DW&PS recommends removing residual free chlorine by pretreatment prior to membrane exposure. Please refer to technical bulletin 609-22010 for more information.

## Important Operating Information

1. Keep elements moist at all times after initial wetting.
2. If operating specifications given in this Product Information bulletin are not strictly followed, the FILMTEC Reverse Osmosis and Nanofiltration Element Three-Year Prorated Limited Warranty (Form No. 609-35010) will be null and void.
3. Permeate obtained from first hour of operation should be discarded.
4. To prevent biological growth during storage, shipping or system shutdowns it is recommended that DOW FILMTEC™ elements be immersed in a protective solution. The standard storage solution contains 1.0 percent (by weight) sodium metabisulfite (food grade).
5. The customer is fully responsible for the effects of incompatible chemicals on elements. Their use will void the FILMTEC Reverse Osmosis and Nanofiltration Element Three-Year Prorated Limited Warranty (Form No. 609-35010).

### DOW FILMTEC™ Membranes

For more information about DOW FILMTEC membranes, call the Dow Water & Process Solutions business:

North America: 1-800-447-4369  
Latin America: (+55) 11-5188-9222  
Europe: (+32) 3-450-2240  
Pacific: +60 3 7958 3392  
Japan: +813 5460 2100  
China: +86 21 2301 9000

<http://www.dowwaterandprocess.com>

Notice: The use of this product in and of itself does not necessarily guarantee the removal of cysts and pathogens from water. Effective cyst and pathogen reduction is dependent on the complete system design and on the operation and maintenance of the system.

NOTICE: No freedom from infringement of any patent owned by Dow or others is to be inferred. Because use conditions and applicable laws may differ from one location to another and may change with time, Customer is responsible for determining whether products and the information in this document are appropriate for Customer's use and for ensuring that Customer's workplace and disposal practices are in compliance with applicable laws and other government enactments. The product shown in this literature may not be available for sale and/or available in all geographies where Dow is represented. The claims made may not have been approved for use in all countries. Dow assumes no obligation or liability for the information in this document. References to "Dow" or the "Company" mean the Dow legal entity selling the products to Customer unless otherwise expressly noted. NO WARRANTIES ARE GIVEN; ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED.

